

Connect the extension wire(Black) to the negative battery terminal or GND(-) then connect to the black wire of main unit. Using a tester, of the two wires connected to the front brake switch, identify the wire that carries 12V when the ignition switch is turned on.



